

# latitude°

## Dishwasher Guide


---



### Tablets

Dishwashing tablets can be found underneath the sink.

---

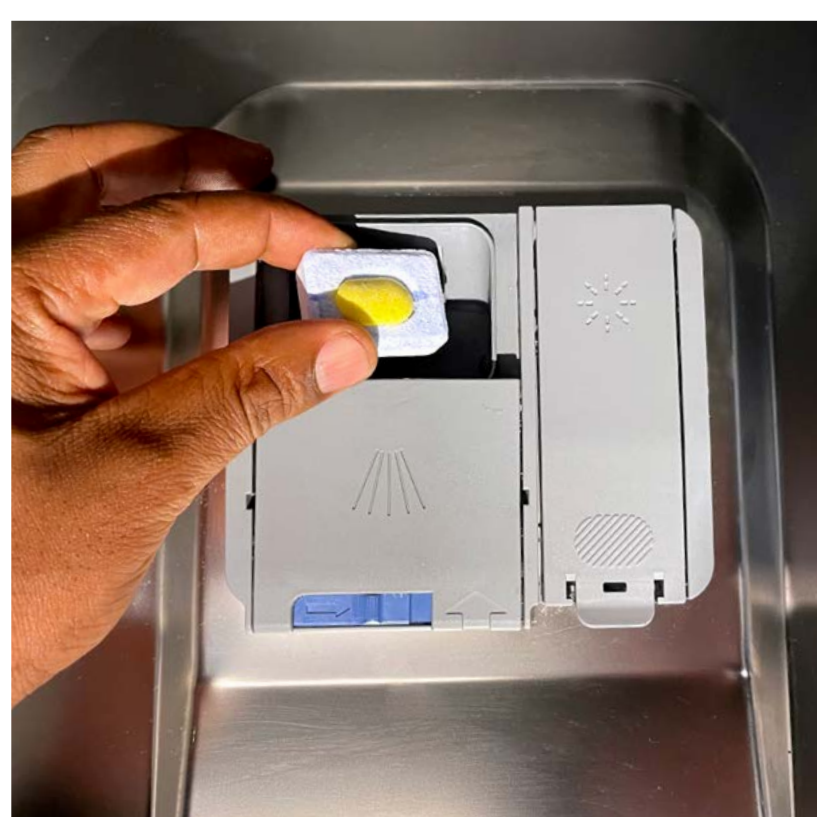

### Tablet compartment

Please ensure that you put a dishwashing tablet into the tablet compartment located inside the machine door.


---



### Enclose the tablet

Slide the compartment cover downwards to enclose the tablet.

---

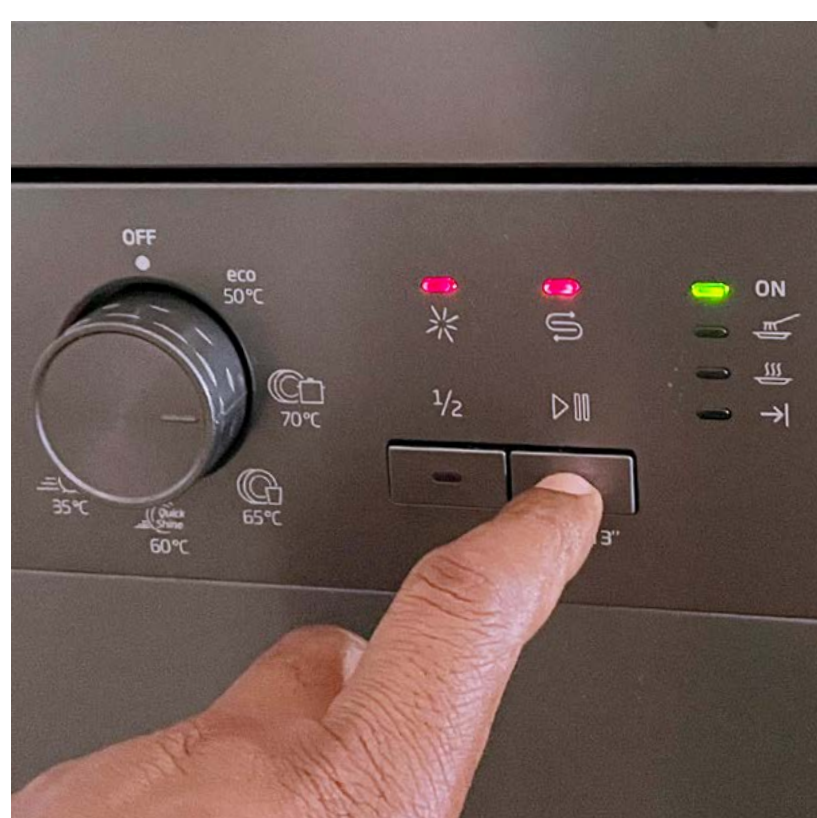

### The Play button

Once the tablet is in, close the door and select the washing program you would like to run and press PLAY.

---



### Don't do dishes?

The good news, we offer housekeeping. Please contact our front desk for more information.

Still not working? **Dial 123** from your apartment phone for assistance.