



latitude°

SMEG Oven Guide

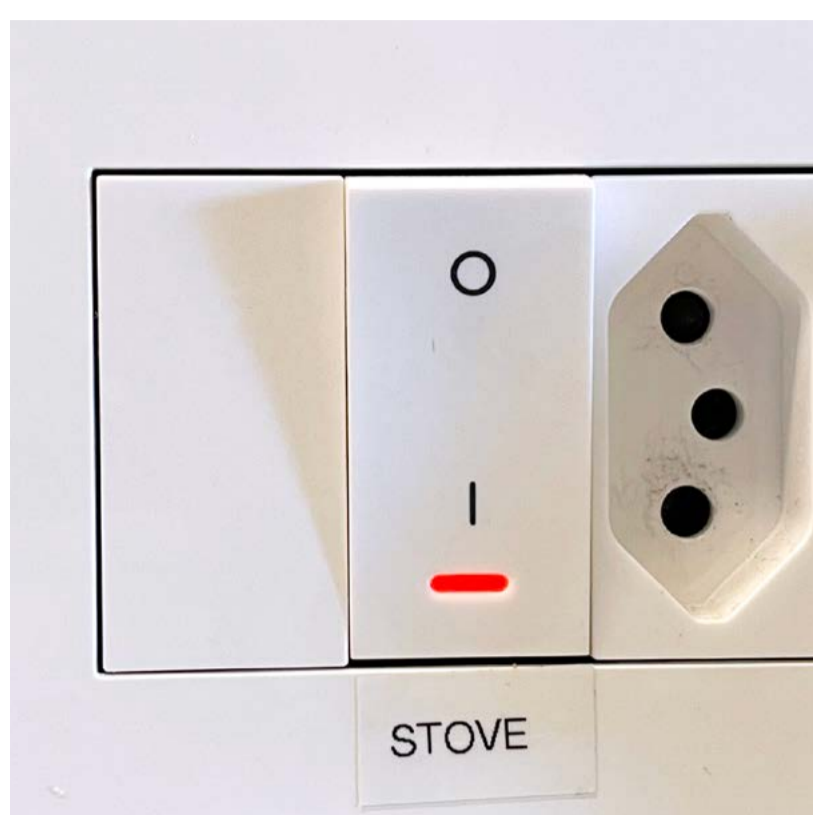


Wall Switch

To use the oven, please ensure the wall switch is on.

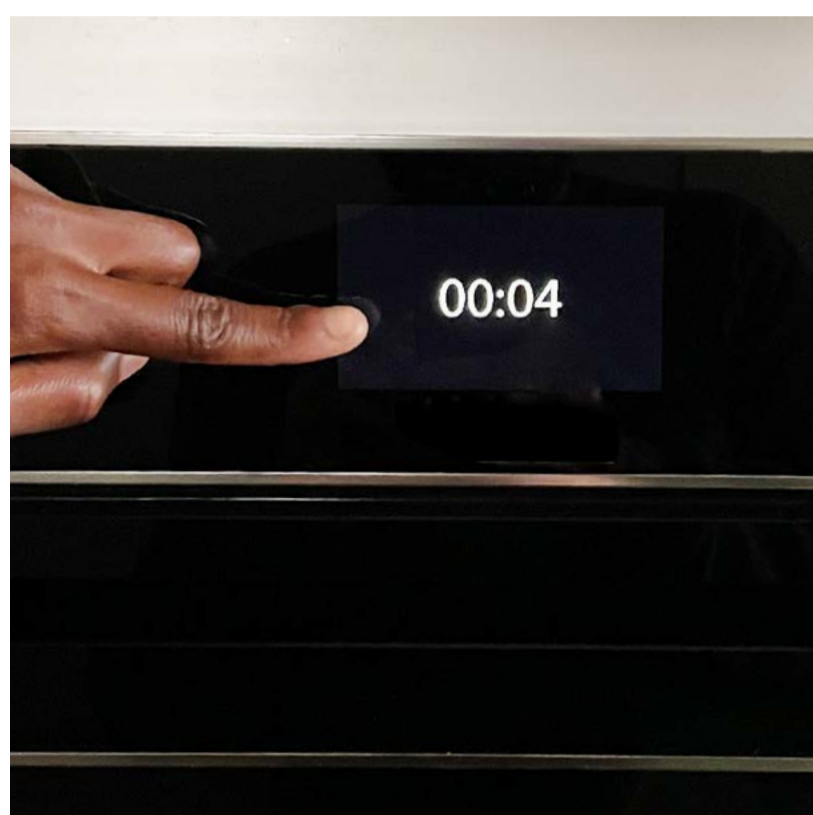


Activate Control Panel

Touch the clock area to activate the control panel.

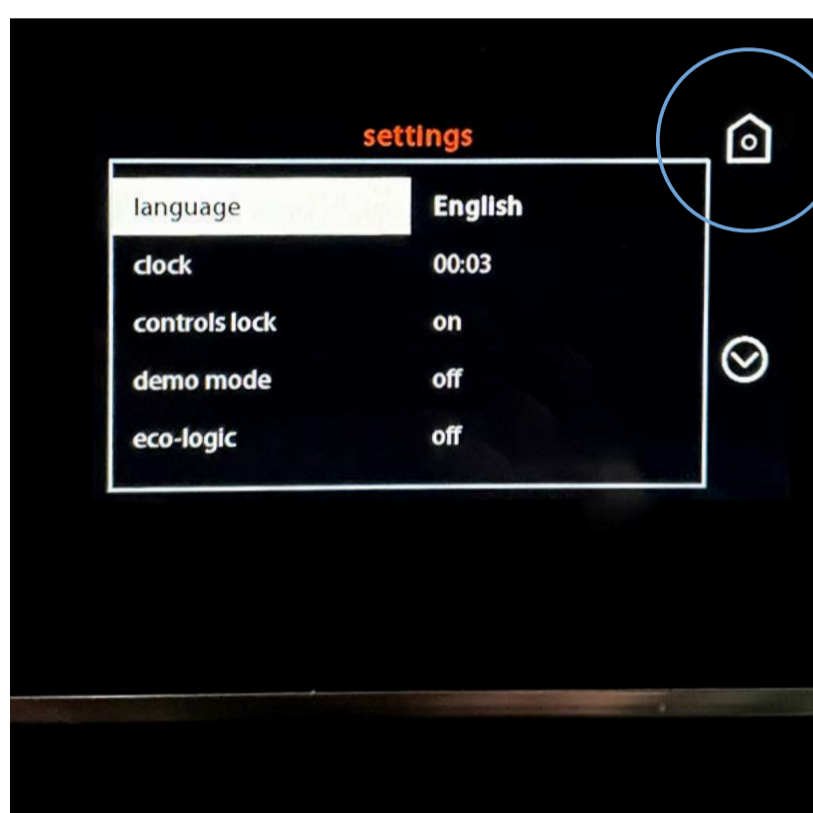


House icon

When the menu pops, on the far-right corner you will find the house icon.

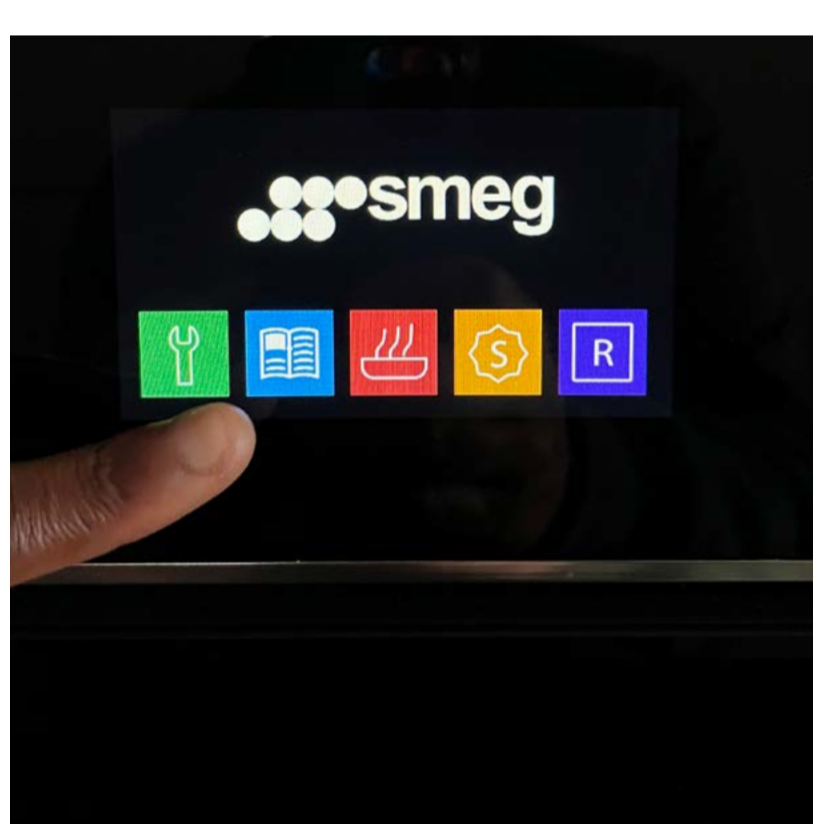

Book icon

Five icons will show up, select the book icon.

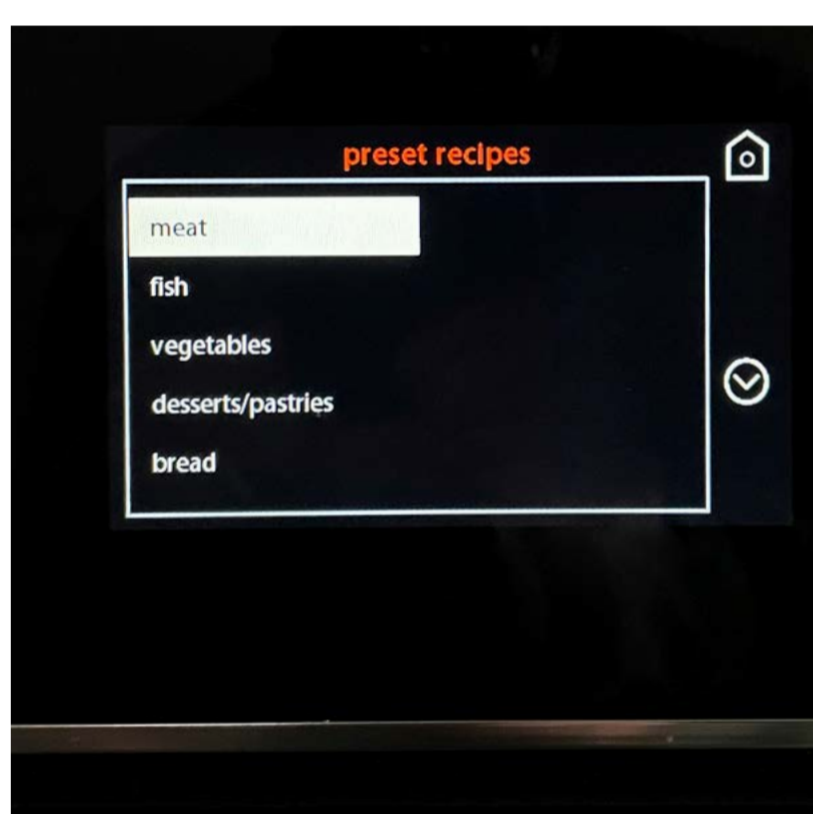


Preset recipe selection

Select your preset recipe based on your preference.



Select weight/temperature

Select the weight in Kgs or enter the temperature of what you want to cook.

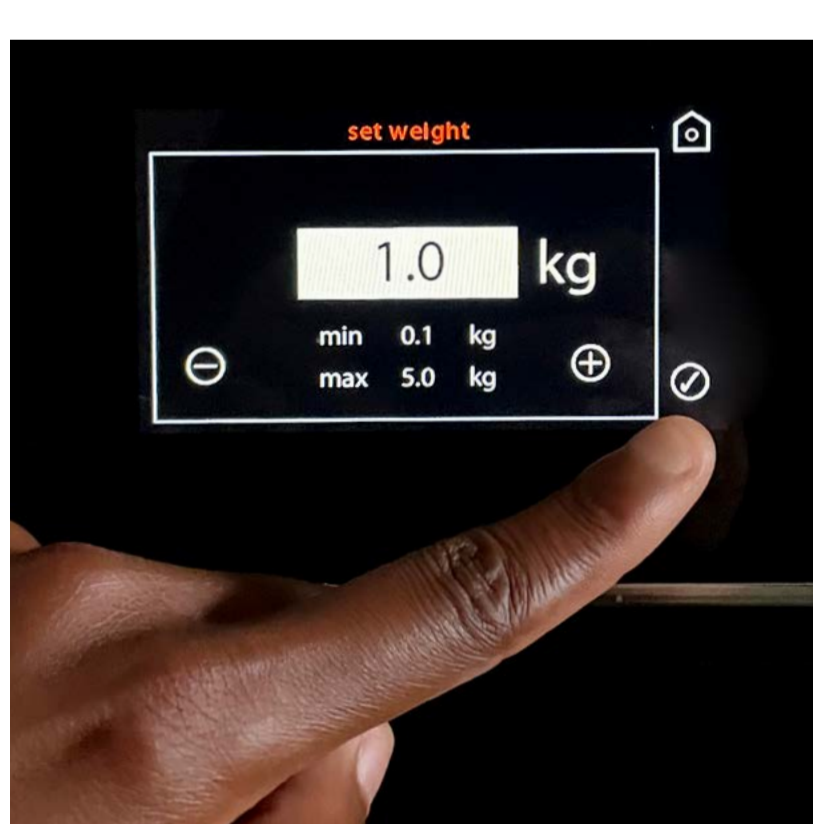

Press the tick

Press the tick on the far-bottom right corner to begin the cooking.



Don't feel like cooking?

Don't feel like cooking? The good news, we have Latitude Café on the 9th floor.

Still not working? **Dial 123** from your apartment phone for assistance.