 




## Washer + Dryer

---

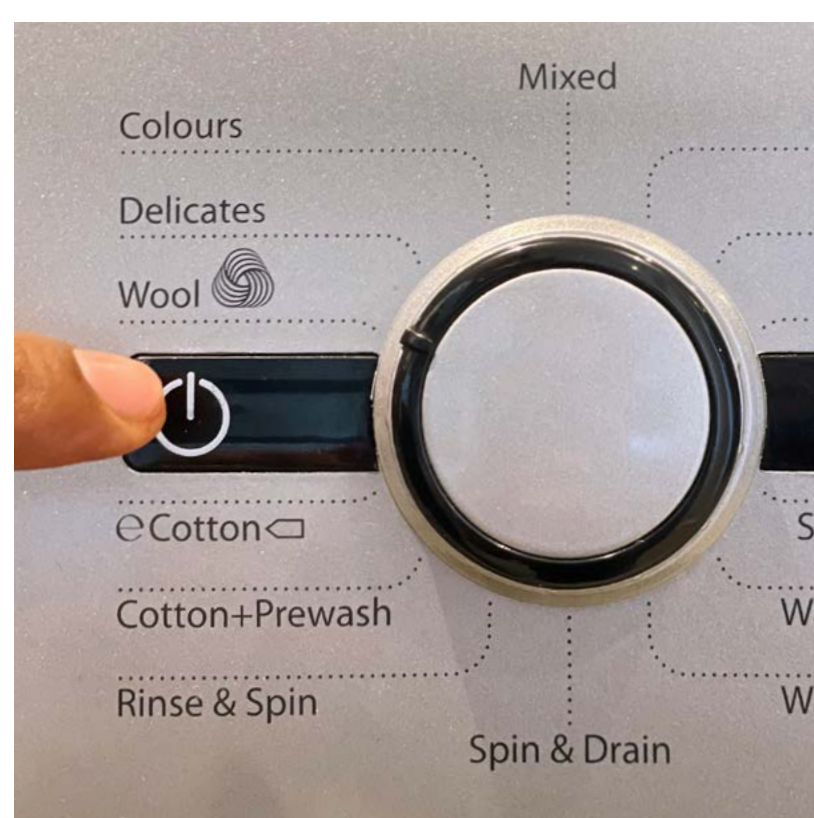

### The power button

Turn the machine on by pressing the power button.


---



### The play button

For a wash cycle, please use the dial to select cycle of choice and press the PLAY button to begin the wash.

---

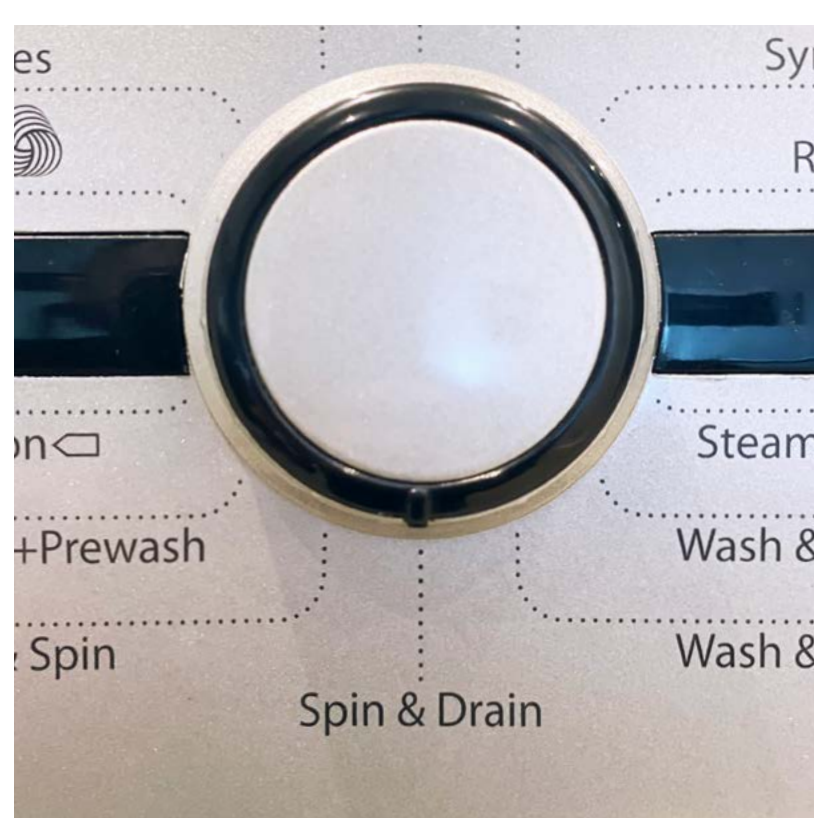

### Dry

To dry clothes only, please put the dial on Spin and Drain. Press the Dry Only button.

---



### Dry settings

Press the Dry settings button to select the dry option you would like to use in terms of time.


---



### We recommend

4hrs 15mins is the longest and will ensure complete dryness.

---

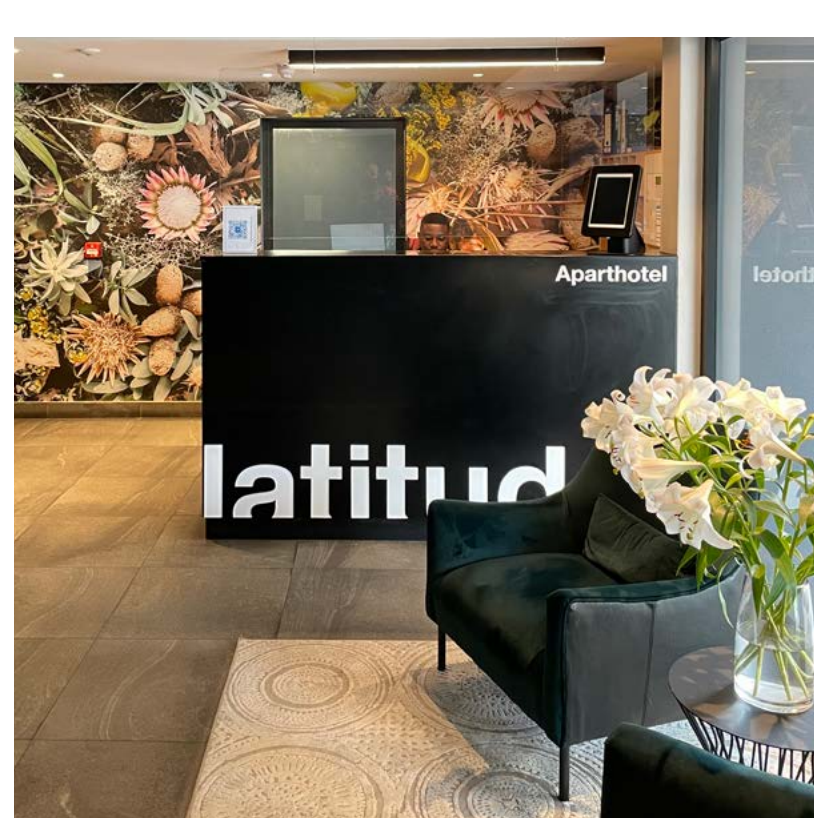

### Don't want to do laundry?

The good news, we offer laundry services. Please contact our reception desk for more information.

Still not working? **Dial 123** from your apartment phone for assistance.